



SMALL / LARGE MOTOR Instruction




1 Motor parameters

| Motor Model | Power | Capacity | RPM | Speed |
|-------------|--------------------------|----------|-----|--------------------------|
| SMALL | AC100-240v 50Hz- 60Hz | 35KG | 90 | 1.2m/5s (2 side open) |
| LARGE | | 50KG | 90 | |


2 Headrail & Motor



3 Remote types

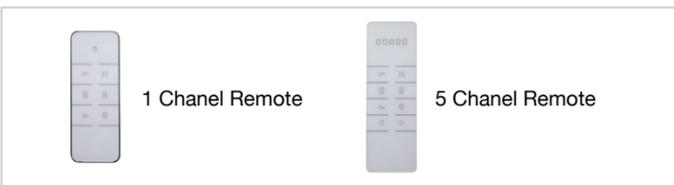

3 Motor settings

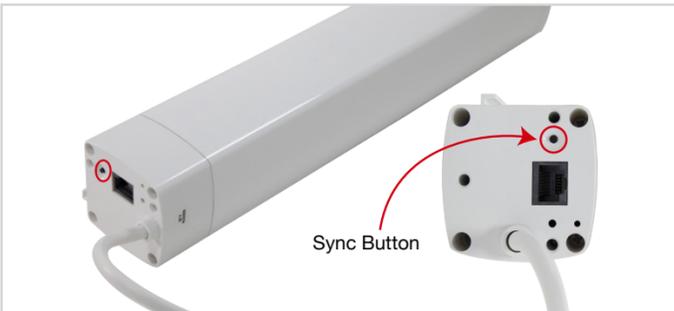

4 How to connect the remote to the motor

• 1 Channel Remote


A) Remove the backside cover of the remote and insert the battery



B) There are 2 small buttons to each side of the battery. The left side is the C button and the right side is the L button



C) Press the right pause button

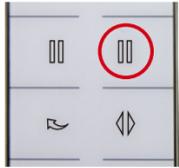

D) Then Press the Sync Button on the bottom right of the motor for 3 seconds until hearing beep sound



E) Then Press the left side C button for 8 seconds at the same time beeps will sound and then stop



• 5 Channel Remote


A) Remove the backside cover of the remote and insert the battery



B) Select the channel you want to program with the bottom arrows. Channel 1 is on the left and channel 5 is on the right



C) There are 2 small buttons on the bottom edge of the remote. The left side is the C button and the right side is the L button

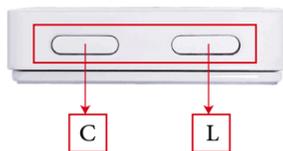


D) Press the right pause button



E) Then Press the Sync Button on the bottom right of the motor for 3 seconds until hearing beep sound



F) Then Press the left side C button for 8 seconds at the same time beeps will sound and then stop

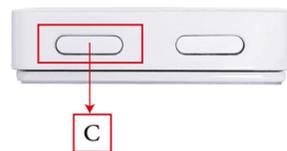


5 Setting the limits


Tilt Limit

A) When setting the tilt limit for the first time the blind should be in the closed position

B) Press the left pause button

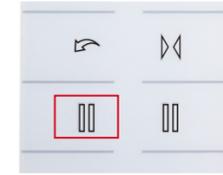

C) Then keep the right L button pressed down until you hear a beep sound

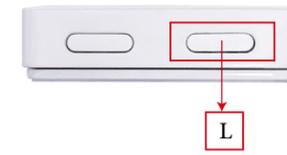


D) Now press the top tilt button on left side



E) Then press the right pause button



F) Then keep the right L button pressed down until you hear a beep sound

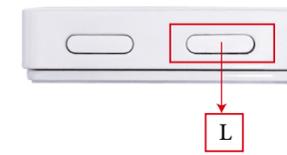


Open & Close Limit

A) Open and close the blinds once to set the limit

6 How to program the open & close direction buttons on the remote


Depending on which side the motor is on the remote will need to be re-set so that the open and close arrows on the remote correspond to the open and close of the blind If the direction on the remote is not the same as the blind:

A) Press down the right side L button and the right side pause button at the same time until you hear a beep sound

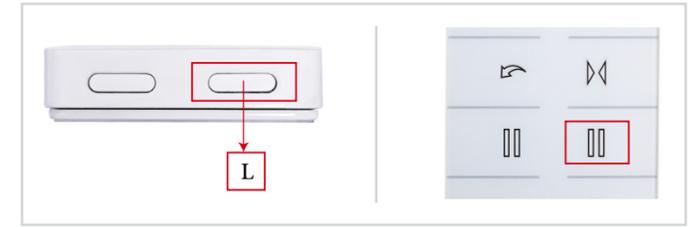

7 How to program the tilt direction buttons on the remote

A) Press down the right side L button and the left side pause button at the same time until you hear a beep sound

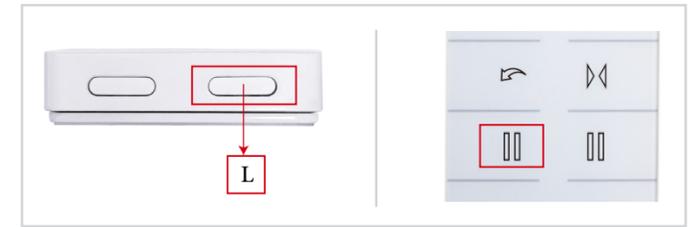

8 Vertical blinds only - how to program the tilt direction buttons on the remote

A) Press down the right side L button and the left side top tilt button at the same time until you hear a beep sound

